

INSTALLATION, OPERATION AND MAINTENANCE MANUAL

Figure 945

3” Combination Air Valves for Water

Drawing ECAV-7138



234 Clay Avenue • Mars, PA 16046 USA
Telephone (724) 776-1020 • Fax (724) 776-1254
E-mail: info-ga@vag-group.com

Manual Number 945.3-IOM 040225



WARNING: Cancer and Reproductive Harm – www.Prop65Warnings.ca.gov

INSTALLATION, OPERATION and MAINTENANCE

3" Figure 945 Combination Air Valves

INTRODUCTION

This manual will provide the information to properly install, operate and maintain the valve to ensure a long service life. The Combination Air Valve is ruggedly constructed to provide years of trouble-free operation with minimal maintenance.

Figure 945 Combination Air Valves are not intended for use with fluids containing suspended solids such as wastewater and sewage. GA Industries Figure 942, 957 or 959 Combination Air Valves are recommended for such applications.

CAUTION

The valve is NOT recommended for use with toxic fluids, fuels or fluids containing hazardous gases

CAUTION

The valve will not function if used at a pressure higher than the maximum working pressure indicated on the nameplate.

The Shop Order (SO) Number, Figure Number, size and pressure rating are stamped on a nameplate attached to the valve. Please refer to the SO number when ordering parts.

DESCRIPTION OF OPERATION

The Figure 945 Combination Air Valve performs the following functions:

- Vents air through the large orifice ahead of the incoming water as the system is filled then closes tightly to prevent the escape of water.
- Automatically opens and closes the small orifice as often as needed to release air that has accumulated in the valve while the system is pressurized and operational
- Opens automatically to admit air through the large orifice to limit vacuum pressure within the pipe or system.

RECEIVING AND STORAGE

Inspect the valve upon receipt for damage during shipment. Carefully unload all valves to the ground without dropping.

The valves should remain in a clean, dry and weather protected area until installed. For long term storage (greater than 6 months) the rubber surfaces of the seat should be coated with a non-toxic lubricant such as "SuperLube" made by Synco Chemical. Do not expose the rubber parts to sunlight or ozone.

INSTALLATION

The 3" Figure 945 is standard with NPT screwed connections. An optional flange pipeline connection is available.

Consult the drawings of record to verify the configuration supplied and installed.

The valve must be installed in an upright vertical orientation, normally at a high point in the system.

If installed outdoors, below ground in a vault or in an unheated area, adequate freeze protection must be provided. Some discharge of water may occur during operation so the valve outlet should be piped to an adequate drain.

An isolating valve should be installed between the valve and the pipeline or system to facilitate maintenance.

Carefully screw threaded end valves onto pipe nipple using compatible thread sealant. Tighten valve using wrench flats. **DO NOT OVER-TIGHTEN.**

Flat-faced flanged valves should be mated with flat-faced flanges and full-face gaskets. If ring gaskets are used the bolt material shall be ASTM A307 Grade B (or equivalent). Higher strength bolting should only be used with full-face gaskets.

Lower heavy valves over the mating flange using slings or chains around the valve body. Lubricate the bolts or studs and insert around flange. Lightly tighten bolts until gaps are eliminated. Torque bolts in an alternating pattern in graduated steps. If leakage occurs wait 24 hours and re-torque the bolts but do not compress the gasket more than 50% or exceed bolt maximum torque rating.

The valve is standard with an NPT screwed outlet connection. It is recommended that the outlet be piped away in a manner that directs the high velocity air discharge away from personnel. An optional "cowl" can be provided to deflect the air discharge.

VALVE CONSTRUCTION

The standard Figure 945 Combination Air Valve has an iron body, stainless steel float and linkage mechanism and a rubber seat. Optional materials can be provided so refer to the List of Materials submitted for the order if non-standard materials were provided.

Refer to Figure 1 for details of construction and parts location.

The inlet connection is at the center of the bottom where the valve attaches to the system and the outlet connection through which air leaves the valve is at the opposite end on the rectangular cover

WARNING

Removing the valve from the line or disassembling the valve while there is pressure in the valve body may result in injury or damage to the valve

PREVENTIVE MAINTENANCE

Figure 945 Combination Air Valves require no scheduled lubrication, adjustment or preventive maintenance.

A periodic visual inspection should be performed to ensure the outlet piping is not obstructed and to verify there is no fluid leakage.

TESTING

Valve operation can be easily tested. Close the inlet isolation valve and remove or loosen the pipe plug nearest the inlet to drain the water from the valve. The floats should drop as the water leaves the valve. NOTE: A ball or gate

valve can be installed in place of the pipe plug to facilitate testing.

Replace or tighten the pipe plug and slowly open the inlet isolating valve. The valve should float closed and seat tightly.

TROUBLESHOOTING

- Valve Does Not Close / Fluid Leakage
Verify debris has not collected on the seats preventing tight closure

Verify rubber orifice button and/or orifice seating surfaces are not damaged

Verify floats have buoyancy

Verify linkage mechanism operates freely without binding or sticking

- Valve Does Not Open
Verify debris in the valve is not preventing the floats from freely falling when fluid is drained from valve

Verify linkage mechanism operates freely without binding or sticking

DISASSEMBLY

While small valves may be more easily serviced by removing it from the line, all valves can be serviced while the body remains connected to the pipeline. A skilled technician with proper tools should perform all work. No special tools are required.

First ensure there is no pressure within the valve. Remove the cover bolts (6) and lift off cover (2). It may be necessary to pry off the cover or tap upward with a mallet and cold chisel at the cover/body juncture.

Lift out the air/vacuum float (5), cushion (23) and guide bearing (25) being careful not to drop these small parts. If needed, unscrew the float guide (24) from the float (5).

Remove the two spring pins (15) connecting the lever arm (11) and float arm (12) to the bracket (3). The float and linkage will be free from the cover.

Remove the spring pin (15) connecting the pivot link (18) to the float arm (12) and remove the float screw (19), lock washer (22) and air release float (10). Remove the hex nut (14) and

lock washer (22) and unscrew the orifice button (8) from the lever arm (11).

Remove the bracket screw (17) to remove the leverage bracket (16).

If the orifice (9) is being replaced, use a 1/2" socket to remove the orifice (9). The orifice was factory installed using Loctite® so it may be necessary to apply some heat to remove.

If the large orifice seat is to be replaced remove the seat screws (4) and seat (3) from the cover (2).

Inspect all parts for wear and damage. Minor scratches and dents in the float are normal. Some floats may contain sand for added weight but if water is detected replace the float. Carefully clean the orifice of scale. Remove all vestiges of the cover gasket from the body and cover surfaces. Clean gasket sealing surfaces with emery cloth. Replace damaged parts.

REASSEMBLY

Clean all parts especially seating and sealing surfaces before reassembling valve. Worn parts should be replaced during re-assembly.

Position the leverage bracket (16) and install the lock washer (21) and locating screw (17) but do not tighten. Apply Loctite® PST thread sealant to orifice (9) and thread into cover but do not tighten. Tighten the locating screw. Torque the orifice to maximum 22 ft-lbs.

Thread orifice button (8) all the way into leverage arm (11) and install hex nut (14) and lock washer (22) but do not tighten. Connect the leverage arm (11) and float arm (12) to the bracket (16) using two spring pins (15).

Adjust the orifice button (8) so that the end of the leverage arm (11) nearest the orifice button is about 1/16" (1.6mm) farther from the cover than the opposite end when the orifice button (8) is gently resting on the orifice (9). Secure by tightening hex nut (14).

Secure air release float (10) to pivot link (18) using screw (19) and lock washer (22). Attach pivot link (18) to float arm (12) using spring pin (15). Verify free movement of linkage mechanism and that the orifice button (8) presses against the orifice (9) when the float is lifted and pulls away when falls.

Install large orifice seat (3) so its neck extends into the outlet. Install and tighten seat screws (4). Tighten seat screws in an alternating pattern but ensure the rubber seat is distorted.

Install the guide bearing (25) and place the cushion (23) on top of the guide bearing so its hole lines up with that of the guide bearing. Apply a small amount of Loctite® to the float guide threads and install float guide (24) into one of the threaded holes in the air/vacuum float (5) and carefully tighten.

Carefully lower the air/vacuum side of the body so that the float guide is inserted into the guide bearing without dislodging the cushion.

Place the cover gasket (4) on the top of the body (1), position the cover (2) with the air release mechanism and air/vacuum seat attached and install the cover bolts.

Tighten the cover bolts in an alternating pattern.

Carefully introduce pressure and check for leaks

Allow valve to remain under pressure for 24 hours then check again for leaks and tighten cover bolts if necessary.

REPLACEMENT PARTS

Genuine replacement parts are available from your local VAG/GA Industries representative or from the factory:

VAG USA, LLC
234 Clay Avenue
Mars, PA 16046 USA
Telephone: 724-776-1020
Fax: 724-776-1254
E-mail: quotes-ga@vag-group.com

REPAIR KITS

Soft Goods Kit A945-3 (P/N 2-80-11000-030) contains Items 3, 8, 20 and 23

Linkage Kit AL945-3 (P/N 2-80-11000-098) contains Items 11, 12, 13, 15, 16, 17 and 21

Other parts are ordered individually

WARRANTY

The Warranty for GA Industries valves is included in our Terms and Conditions which can be found here: <https://gaindustries.com/terms>

PARTS LIST
(Refer to Figure 1)

Item	Name	Material	Item	Name	Material
1.	Body	Cast or Ductile Iron	13.	Link	316 Stainless Steel
2.	Cover	Cast or Ductile Iron	14.	Hex Nut	Stainless Steel
3.	Air/Vacuum Seat	Buna-N Rubber or EPDM	15.	Spring Pin	Stainless Steel
4.	Seat Screws	Stainless Steel	16.	Leverage Bracket	316 Stainless Steel
5.	Air Vacuum Float	316 Stainless Steel	17.	Bracket Screw	Stainless Steel
6.	Cover Bolts	Steel or 316 Stainless Steel	18.	Pivot Link	316 Stainless Steel
7.	Pipe Plug	Steel	19.	Float Screw	Stainless Steel
8.	Orifice Button	Buna-N & Stainless Steel	20.	Cover Gasket	Composition
9.	Orifice	316 Stainless Steel	21.	Lock Washer	Stainless Steel
10.	Air Release Float	316 Stainless Steel	22.	Lock Washer	Stainless Steel
11.	Leverage Arm	316 Stainless Steel	23.	Cushion	Buna-N Rubber or EPDM
12.	Float Arm	316 Stainless Steel	24.	Float Guide	316 Stainless Steel
			25.	Guide Bearing	Self-lubricating Copolymer

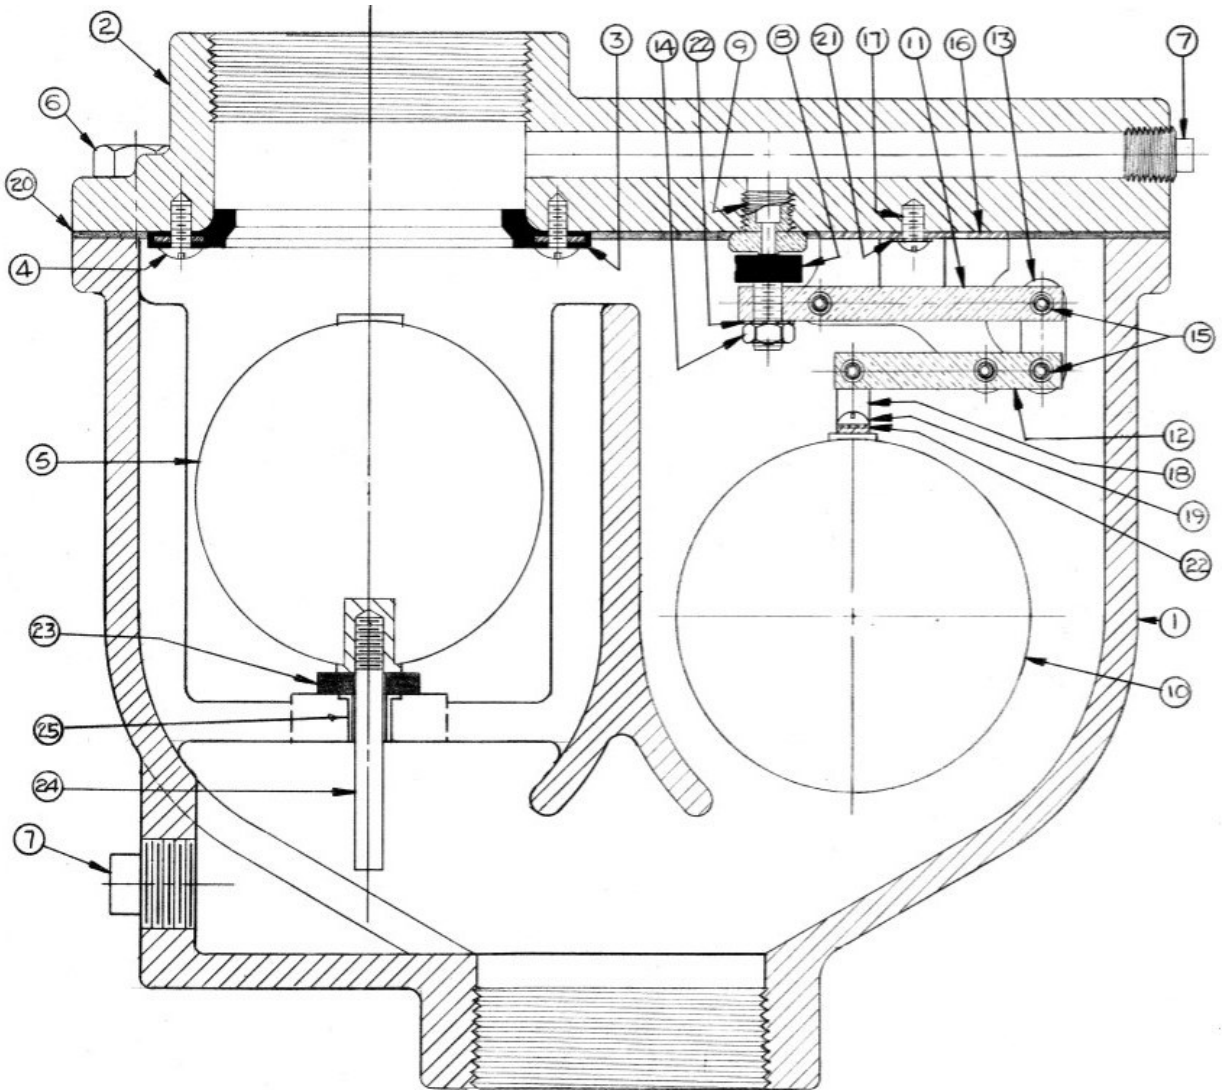


Figure 1
3" Figure 945